

# UMP FOR WINDOWS

Installation and configuration instructions

s.o. Windows 7, Vista, XP




**elektrosistem**

via E. Toti, 4 - 44042 Cento (Fe) ITALY  
Tel. +39 051 683 65 02  
Fax +39 051 683 67 99  
CF/PI 00439700386  
[www.elektrosistem.com](http://www.elektrosistem.com)


## Installation and configuration of “UMP for Windows” program

1)

- open the folder “UMPforWindows” or the archive “UMPforWindows.zip”
- run “Setup.exe” application

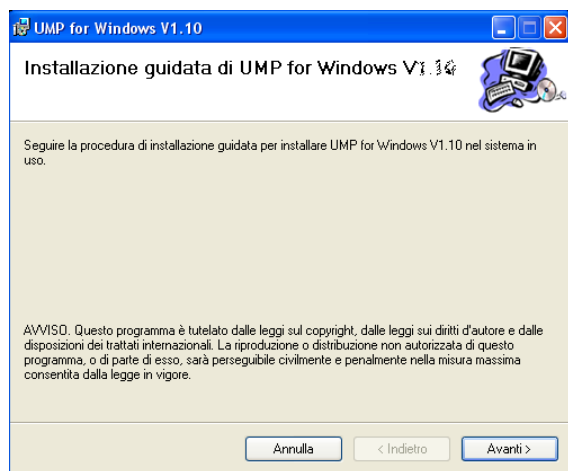

2)

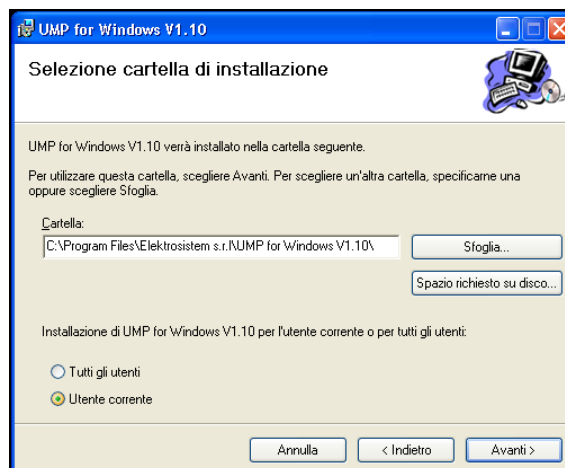


- define the **destination folder**
- select “**Avanti >**”.

Follow the standard installation procedure of a new application up to the end.


select “**Avanti >**”.

3)

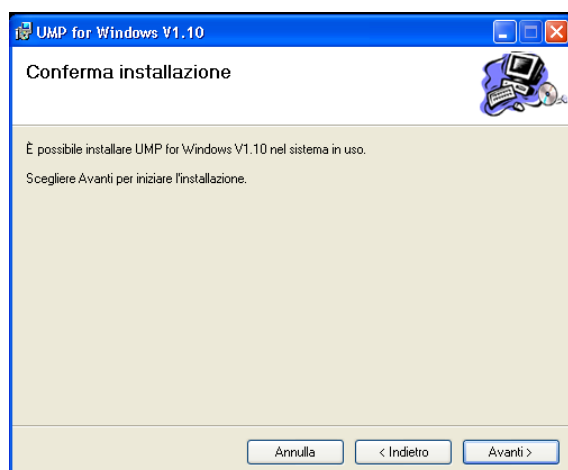

select “**Avanti >**”.

4)

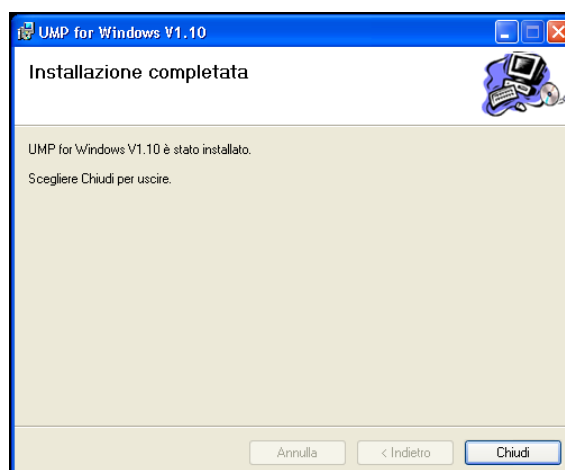


select “**Chiudi**”.


The installation is finished.

5)

Launch “UMP for Windows” application from Programs Menu.

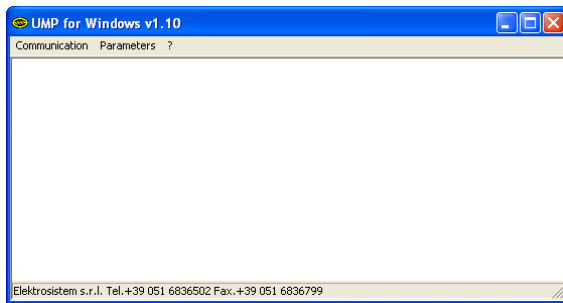

6)

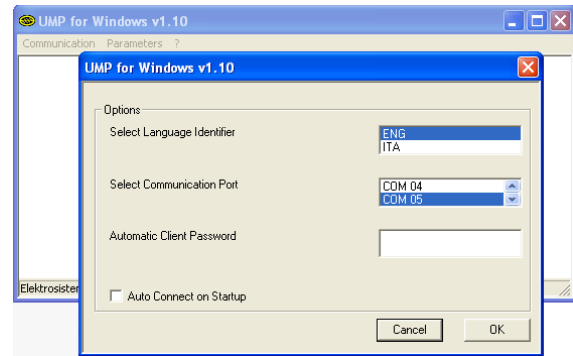

- in “Communication” Menu select “Options”.
- in “Select Communication Port” Menu select the **number of COM port** associated to RS2001 interface or that associated to USB2006 interface [see procedure B].
- select “OK”.

“UMP for Windows” has been configured correctly.

7)

To check operation, connect your PC to the control unit to be programmed (this one must be **switched on**) through the RS2001 or USB2006 interface.

Select “Connect” in “Communication” Menu.

After a few seconds showing “Searching for devices on bus”, the following page will be displayed:

